USER MANUAL MP4-M7T

Please Read Carefully Before Use

Table of Contents

Important safety instructions and precautions 3
Product Connections and Use 3
What's in the Box 4
Basic Operation 4
Main Menu 4
File Formats 5
Music mode 5
Video 6
Voice Record 6
Photo 6
Ebook 6
FM Radio 6
Browser 7
System Setting 7
Converting Files 7
Trouble Shooting / Q & A 8
System requiments 9
Specifications 9

Important safety instructions and precautions

- Read all instructions carefully before use.
- Retain manuals for future reference.
- Use this product only in the manner described.
- Only use a water-dampened soft-cloth to clean the surface of this product.
- Only recommended batteries and accessories should be used with this product.
- The following will damage this product: any liquid such as water or moisture, extreme heat; cold; humidity, dusty or sandy environments.
- Only place this device on stable surfaces and ensure that any attached cables are secure and will not cause the device to fall.
- There are no user serviceable parts in this product.
- Un-authorized attempts to dismantle or repair this product will void product warranty and may result in dangerous electric shock.
- Do not use this product if you are in control of dangerous machinery such as a motor vehicle.
- Using this device near other electronic devices may cause interference.
- Do not use this product in electrical storms.

PRODUCT CONNECTIONS AND USE

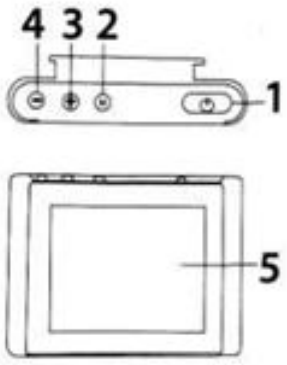

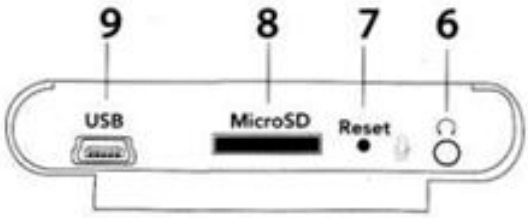

1. **Power/Play/Pause** Button: Press to play or pause. Press and hold to turn ON or OFF	6. **Earphone jack:** 3.5mm
2. **Mode button**: Select menu items or enter a feature	7. **Reset**
3. **Volume –/Rewind** button: Press to decrease volume. Press and **hold** to rewind a song or video	8. **Micro SD card slot**
4. **Volume +/Fast** forward button: Press to increase volume. Press and **hold** to fast forward the song or video	9**. USB port**
5. **Touch screen:** Touch screen display	

WHAT'S IN THE BOX

1 x MP4–M7T, 1 x USB cable, 1 x Earbuds, 1 x User Guide

BASIC OPERATION

Power On/Power off	PRESS and HOLD the POWER button to turn ON or OFF; Play or pause
Volume Key	Press the + or - to increase or decrease volume; Move to the next file
M (Menu)	Press to navigate folder locations from menu items such as photo, videos
Unlock the Screen	Press and hold the - Volume button to unlock the screen.
Charging	This device will be fully charged after 2 hours of charging. It is recommended to charge this unit over night before first use.
Connect/Disconnect from PC	Connect to PC via the supplied USB. The MP4-M7T can then be used as a removable storage device.

MAIN MENU

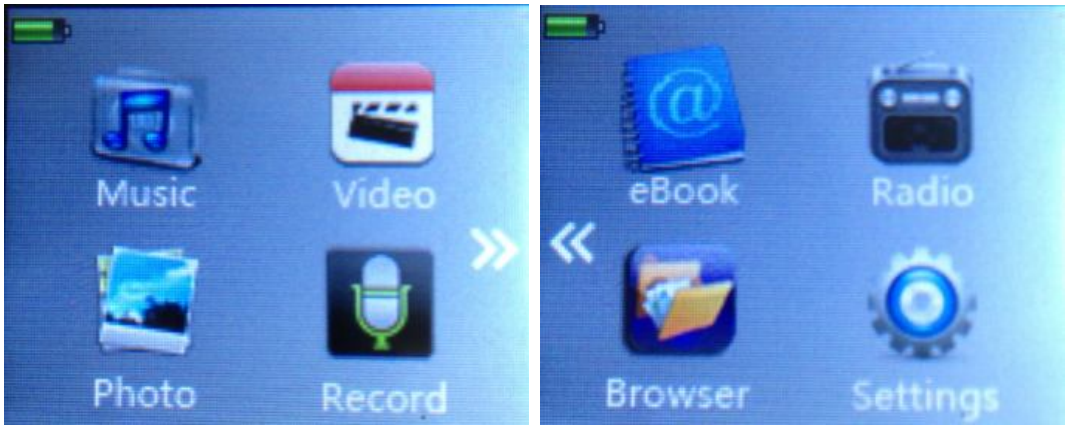

Introduction: The main menu consists of two screens as seen above. The double arrows middle of screen can be used to move to the next / previous screen.
Either touch the icon you wish to enter, or alternatively navigate the icons using the volume buttons.
To return back to the main menu from feature option screens, simply PRESS the PLAY button.

FILE FORMATS

MP4-M7T supports MP3, WAV, WMA, AVI and AMV files only. A file conversion program is saved on your device for your convenience. Simply move this program to you PC, install it and use it to convert files you require. The program is called “EndUserTools_V4.37.rar”

Note: All the media playback and record features operate using similar screens and common button actions. For example the music playback screen looks the same as the video playback screens, with only a few slight differences in options.

MUSIC MODE

Select MUSIC from the main menu. The following onscreen icons/options are:

Play/Pause a file	Play the next file	Back to menu
Play the previous file	Functions key (repeat, replay, delete…)	Volume increase & decrease

Press the ARROW icon next to the battery icon to access the music sub-menu options.

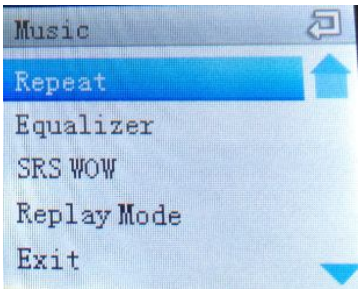

The playback options are:
NORMAL, REPEAT ONE, FOLDER, REPEAT FOLDER, REPEAT ALL, RANDOM ALL

Press the FOLDER ICON (under the volume icon) to access the folder sub-menu options.

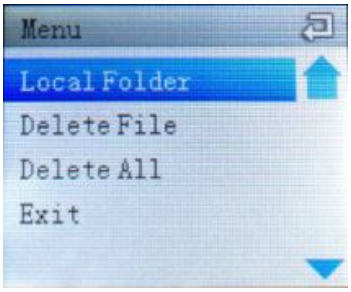

The folder options are:
LOCAL FOLDER, DELETE FILE, DELETE ALL, EXIT.

*Note: This music player supports LRC file formats for lyric information. Please name any Lyric files the same as the music file. Eg. The music file Say you Say me.**mp3** will have a Lyric file called Say you Say me.**lrc***

VIDEO

Select VIDEO from the main menu. The onscreen options here are: repeat file, volume, return to main menu, folder options, previous/next and play/pause.

VOICE RECORD

Select RECORD from the main menu. The options here are:

Record (record a new file)	Onscreen options: Return to main menu, Folder options, previous/next and play/pause.
Rec Playback (Playback a recorded file)	Onscreen options: repeat file, volume, return to main menu, folder options, previous/next and play/pause.

PHOTO

Select PHOTO from the main menu. Use the volume keys to move through files. Use the MENU button to move through folders and to view folder options. Touch the file name onscreen to view the file. While the image is displayed on screen, swipe the screen with your finger to move to the next file.

EBOOK

Select EBOOK from the main menu. Use the volume keys to move through files. Use the MENU button to move through folders and to view folder options. Touch the file name onscreen to view the file. Use the volume keys to navigate through pages.

FM RADIO

Select RADIO from the main menu. Insert the earbuds. The earbuds work as the antenna so they must be installed before use. The onscreen options are: volume, return to main menu, folder options, next/previous file and play/pause.

Note: Enter the folder options to set up auto-scan, save or delete favourite channels or to check region location settings.

BROWSER

Use this feature to manually search through all files on your MP4-M7T.

SYSTEM SETTING

The options are:

Date/Time Select the required cells and use the screen arrows for adjustment
Auto Dim Change the auto screen dim settings between 0 to 50 secs (in 5 sec increments)
Language Choose your preferred language
Auto Off Auto Power Off (0 to 20mins; in 5 mins increments)
Sleep mode (0 to 120mins; in 10 mins increments)
Memory Info Display used memory capacity.
Firmware Version Display firmware version
Exit Exit system settings

CONVERTING FILES

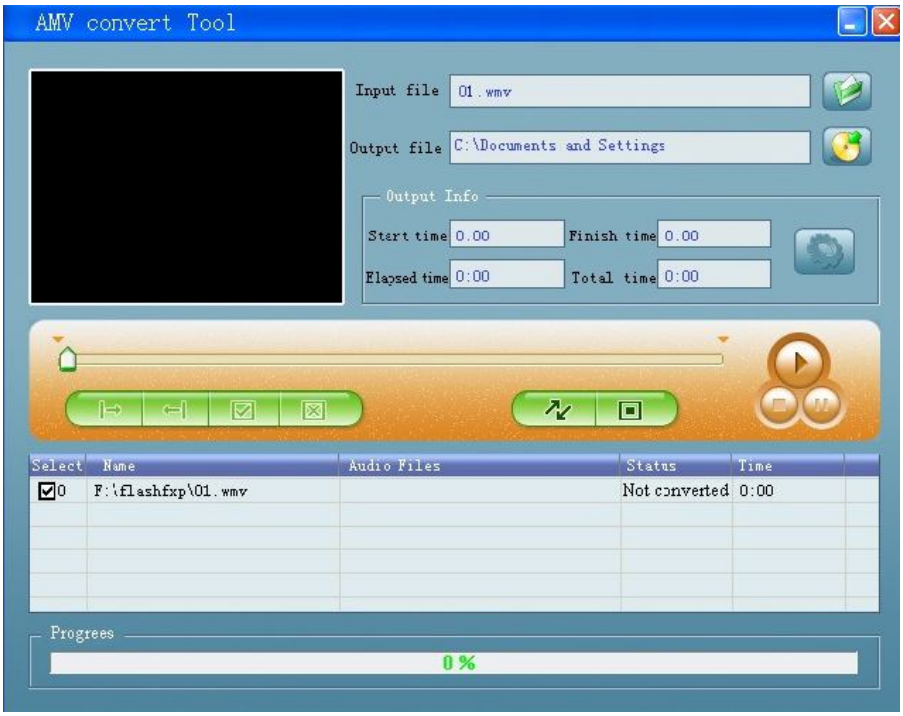

1) Click the icon to locate the file to be converted
2) Click the icon to locate the folder where the new file will be saved
3) Click the icon to check the conversion settings

4) Set the start and end time of the file to be converted
5) Select the video type to convert to. It is recommend to leave the type as AMV for video files
6) The screen width and height setting should be left at 128*160. Other resolutions may not be compatible.
7) Video convert and settings may be adjusted as required. In some cases, trial and error may be required to best match your specific file with your MP4-M7T
8) Click the OK button to continue
9) Click the icon to begin the conversion
10) When the conversion is complete, you are ready to transfer the file to your MP4-M7T

TROUBLE SHOOTING / Q & A

No power	Check the player is turned on Check the battery and charge if required Connect to USB power Source
No sound	Check the volume level is set correctly Check the Earphones are connected correctly
Video Files not playing	Check that the file conversion was done correctly.
No Radio/Weak Signal	Make sure the earphones are connected correctly and that the cable is unravelled. Change Location for better reception.
Convert File not working	Make sure the screen size conversion is 128*160 pixels
Data Transfer Error	Check the USB cable and ensure that both ends are connected correctly. Make sure there is enough space on player to accept the file to be transferred.

SYSTEM REQUIMENTS

Your computer system must meet the following specifications:

- Pentium 200MHz or above
- Microsoft Windows 98 and above, MAC OS10 and above, Linux 2.4.2 and above
- Spare USB port

SPECIFICATIONS

Screen	1.8” TFT touch (128*160 pixels)	
PC connection	High speed USB2.0	
Memory flash	4GB	
Voice Recorder	Sample rate	8KHz
	Recording format	WAV（32K bps）ACT（8K bps）
	Recording time	Approximate 35hrs
FM radio	Receiving frequency range	76MHz–96MHz / 87MHz–108MHz
Music format	MP3,WMA	
Video format	AMV (128*160)	
Normal Operation Temperature	-5 ~ 40 degree	
Multi-language	Chinese, English, Spanish, French, Italian, Portuguese, Germany etc	

For further product information and instruction please visit our product web page at www.laserco.net or email support@laserco.com.au

Please note: As continual improvements are made to this product, slight operational differences may occur. For the most up-to-date user manual, please visit our web site.

Warranty Against Defects

Laser Corporation Pty Ltd ("Laser") warrants your new product to be free from defects in materials and workmanship for 12 months, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. The benefit of this warranty is in addition to your rights under the Australian Consumer Law and to other rights and remedies of the consumer under a law in relation to the goods or services to which the warranty relates.

Through a network of retailers and resellers, Laser will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse, normal wear and tear, neglect or improper storage.

Please retain your receipt as proof of purchase

How to make a product warranty claim:

Step 1: Find your receipt which proves the date of purchase. Where the date of purchase cannot be verified, your place of purchase or Laser will make an assessment based on the date of manufacture, the condition of the Laser Product and the type of defect.

Step 2a): Contact your place of purchase. They will assess the nature of the fault and refund or replace the product as per their store refund or warranty policy.

Step 2b): If your place of purchase cannot be contacted, then you can contact Laser . Customer Service with details of your defective Laser Product: Phone: (02) 9870 3355; or Email: service@laserco.com.au or online www.laserco.net/support/warranty (click on "Consumers (End Users)"). Our business address is at 1/6-8 Byfield Street, North Ryde, NSW 2113

Step 3: Laser . will issue you with a Return Authorisation (RA) number within 48 hours. When requested, send us the defective Product and a copy of your receipt. Laser will cover the cost of the return delivery.

Step 4: Wait for us to contact you. Once we have received your defective Laser Product for inspection, we will inform you of our assessment of your claim within 7 days. When we contact you, we will firstly let you know whether you have a valid claim under this Warranty, and if so, we will inform you whether your defective Laser Product will be replaced or repaired, together with the number of days you can expect to wait to receive your replaced or repaired Laser Product.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.